

Ameriprint inkjet compatibility chart for hp



Printer Model	51626A	51625A	51629A	51649A	C1816A	51633M	C6628A	C6614D	51645A	51641A	C1823D	C6615D	C6625D	C6578D		C6578A
DeskJet, DeskJet Plus	●															
Deskwriter, DW 510, 520	●															
DeskJet Portátil						●										
DeskJet 310, 320, 340/Cbi; DW 310, 320		●				●										
DeskJet 350C, 350Cbi					●		●									
DeskJet 500, 540, 550C, 560C	●	●														
DeskJet 500, 510, 520	●	●														
DeskJet 400, 420 C	●															
Deskwriter C, 540, 550, 560	●	●														
DeskJet 610C, 612C, 630			●	●												
DeskJet Serie 640C				●				●								
DeskJet 600C, Serie 660C, Serie 670, Serie 680			●	●												
Deskwriter 600, 660, 680			●	●												
DeskJet Serie 690C; DW 694			●	●	●											
DeskJet 710C, 712C, 720C, 722C									●		●					
DeskJet 810C, 812C											●	●				
DeskJet Serie 820C, 850C									●	●						
DeskJet 830, 832									●		●					
DeskJet 840C, 842C												●	●			
DJ Serie 855C, Serie Profesional 870C, Serie 890C									●	●						
DeskJet 880C, 882, Serie 895C									●		●					
DeskJet 930C, 932C, 935C, 950C, 952C, 955C, 960C									●							●
DeskJet 970, Serie profesional 990C									●							●

Black
 Color
 photographic
 CC = Color Copier
 DJ = Deskjet
 DW = Deskwriter
 OJ = Officejet

